



M-POWER-1T+1T-OVAL BEZEL

BEZEL INSTALL GUIDE



CUT HOLE IN TOP

- 1 Rout/cut top of wood/stone/etc. for outlet bezel as indicated on template labeled “TOP TEMPLATE”.



CUT HOLE IN BOTTOM

- 2 Rout/cut bottom of wood/stone/etc. for outlet bezel as indicated on template labeled “BOTTOM TEMPLATE”.



INSTALL OUTLET

- 3 Insert outlet from bottom, and adjust nuts above and below both of the mounting brackets so that the tops of the mounting brackets are flush with the wood/stone/etc. as shown.




SECURE SCREWS

- 4 Insert screws into holes on the mounting bracket and screw in, locking the outlet in place.



M-POWER-1T+1T-OVAL BEZEL


BEZEL INSTALL GUIDE

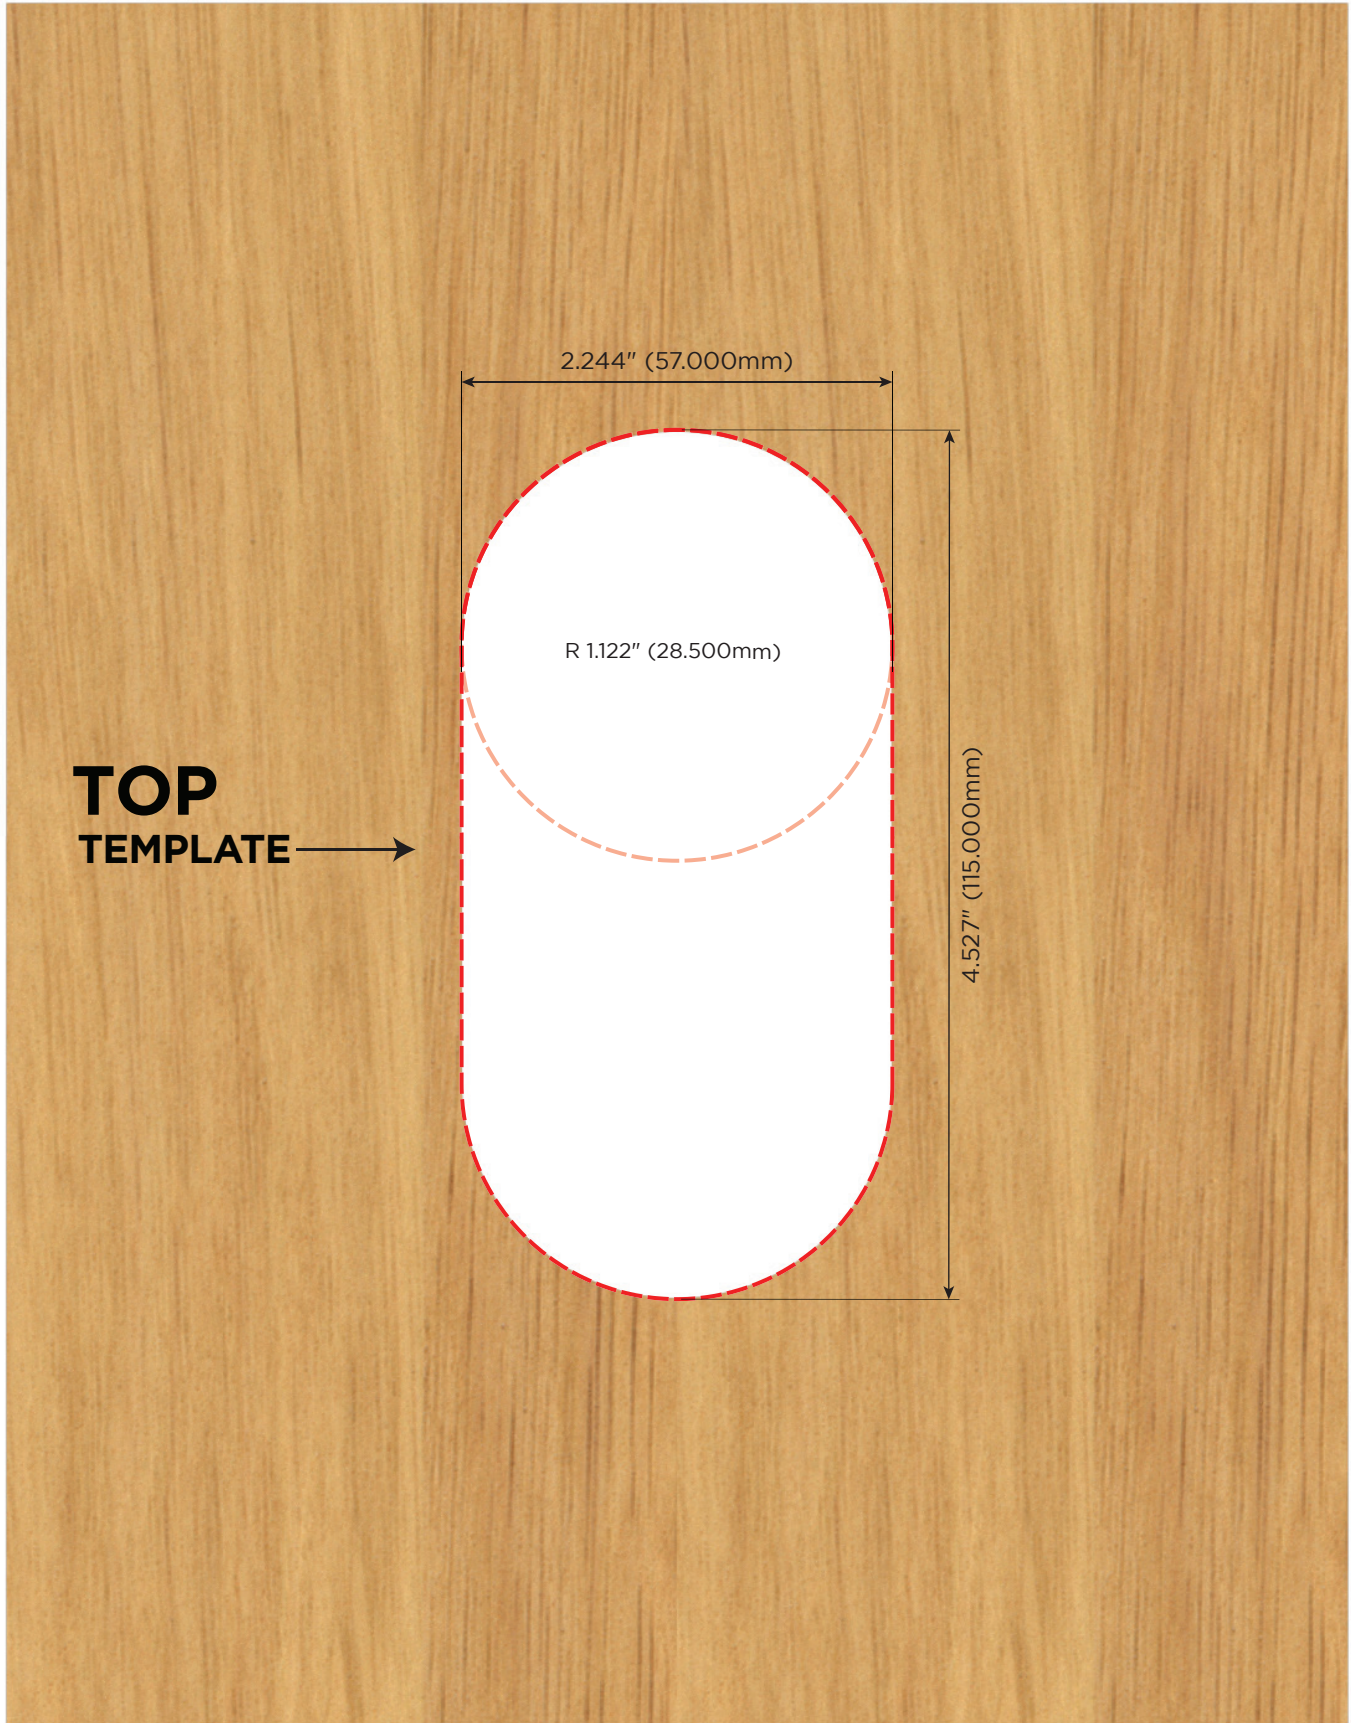



M-POWER-1T+1T-OVAL BEZEL

BEZEL INSTALL GUIDE

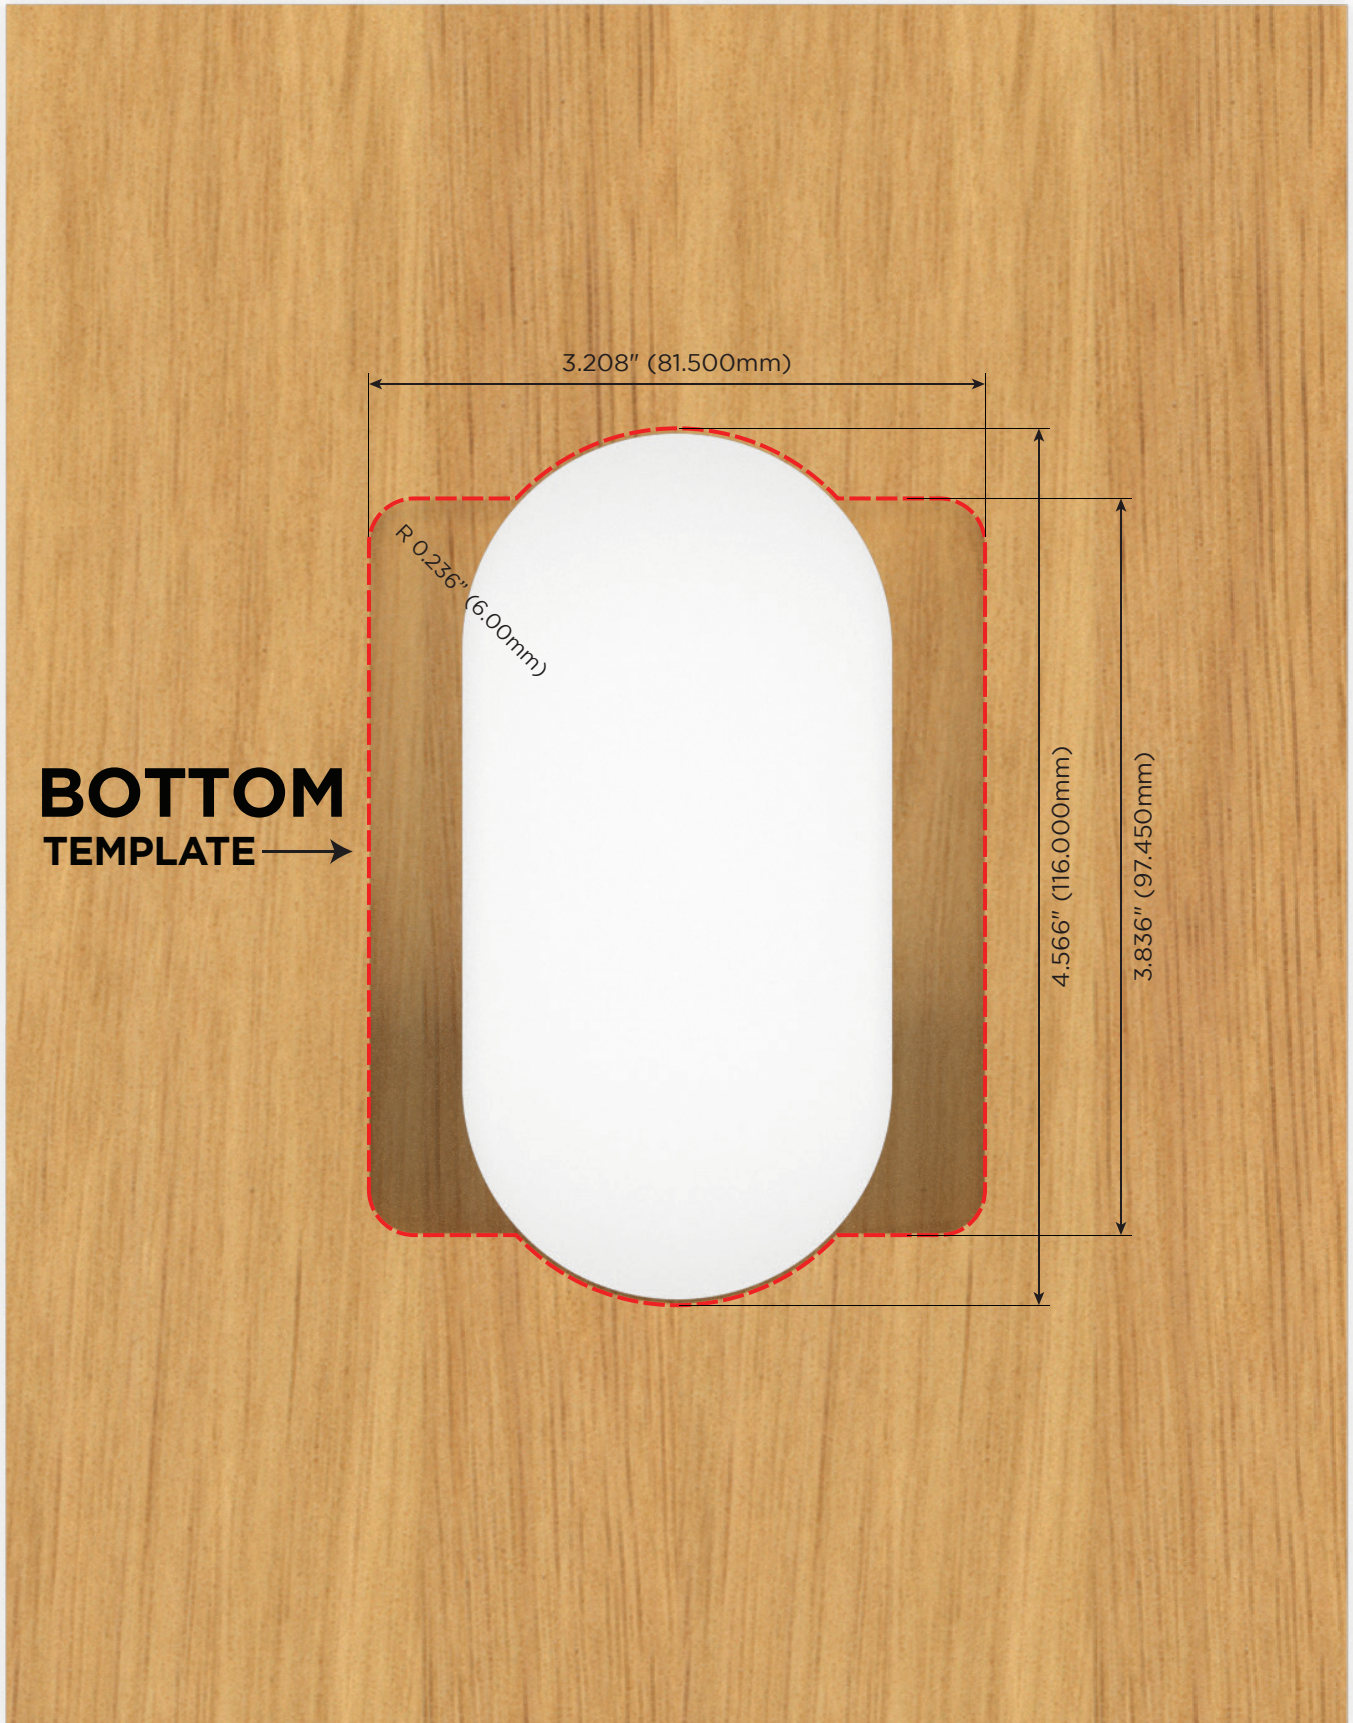



M-POWER-1T+1T-OVAL BEZEL

BEZEL INSTALL GUIDE

