

CUT HOLE IN BOTTOM

- 1 Rout/cut hole in wood/other substrate for reading lights as indicated on attached template labeled "ROUTING TEMPLATE".



INSERT READING LIGHT

- 2 Insert reading light into the hole from the top/front, and slip mounting brackets as shown over the threaded studs on the back.



FIX IN PLACE

- 3 Screw the four nuts (8-32) onto the studs behind the mounting brackets and tighten, permanently fixing the reading light in place.



M-RDLT-BLADE HEADBOARD READING LIGHTS

Distributed by



Mormax Company, Inc.


914-699-0101

8 Westchester Plaza

sales@mormax.com

Elmsford, NY 10523

mormax.com

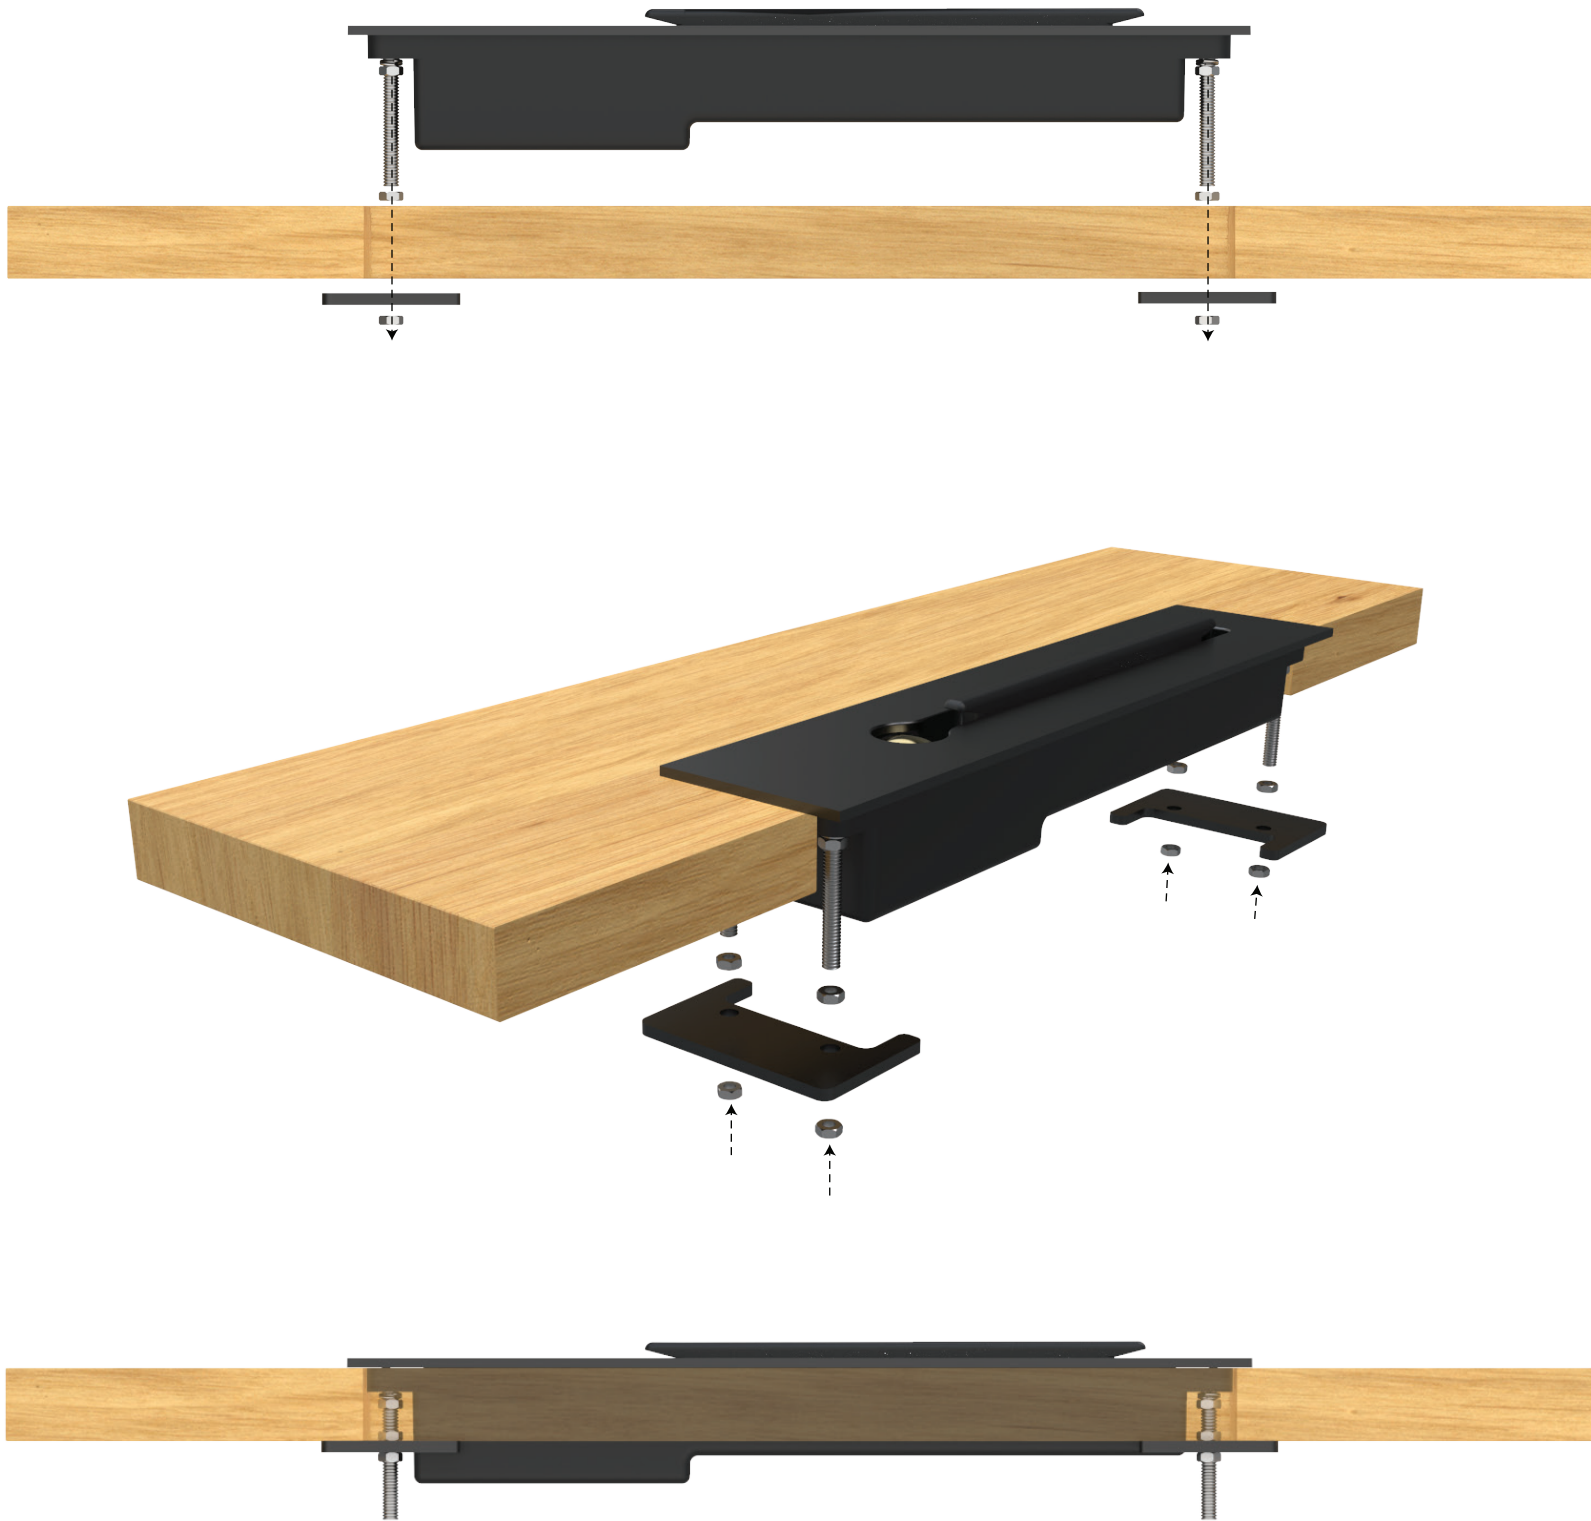




M-RDLT-BLADE HEADBOARD READING LIGHTS

Distributed by




Mormax Company, Inc.
8 Westchester Plaza
Elmsford, NY 10523

914-699-0101
sales@mormax.com
mormax.com

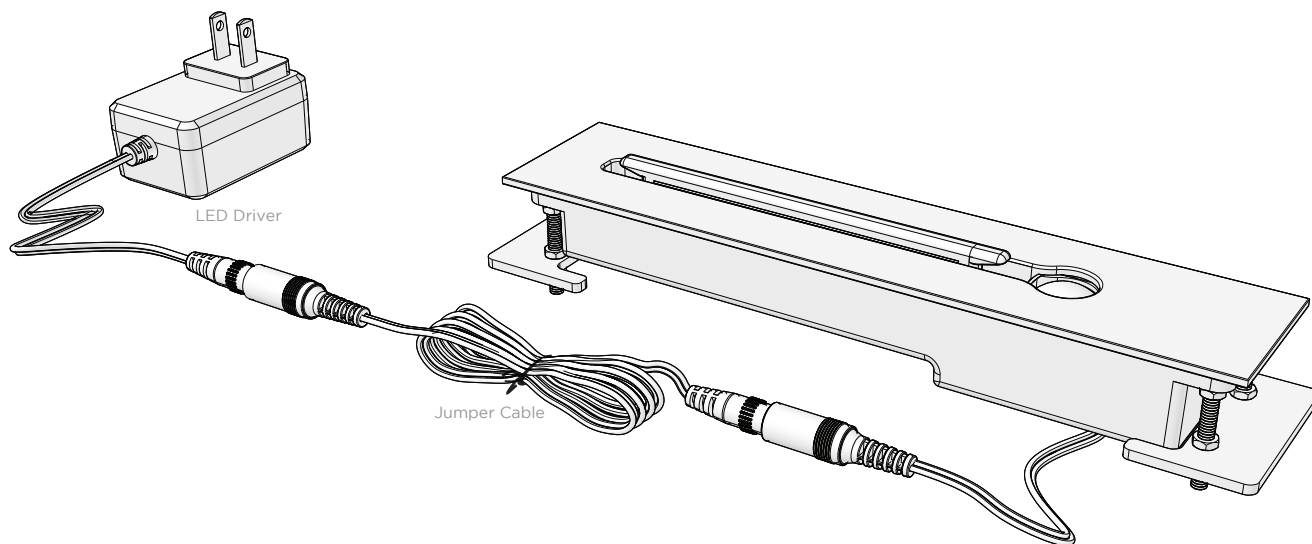

Shown in installed on headboard

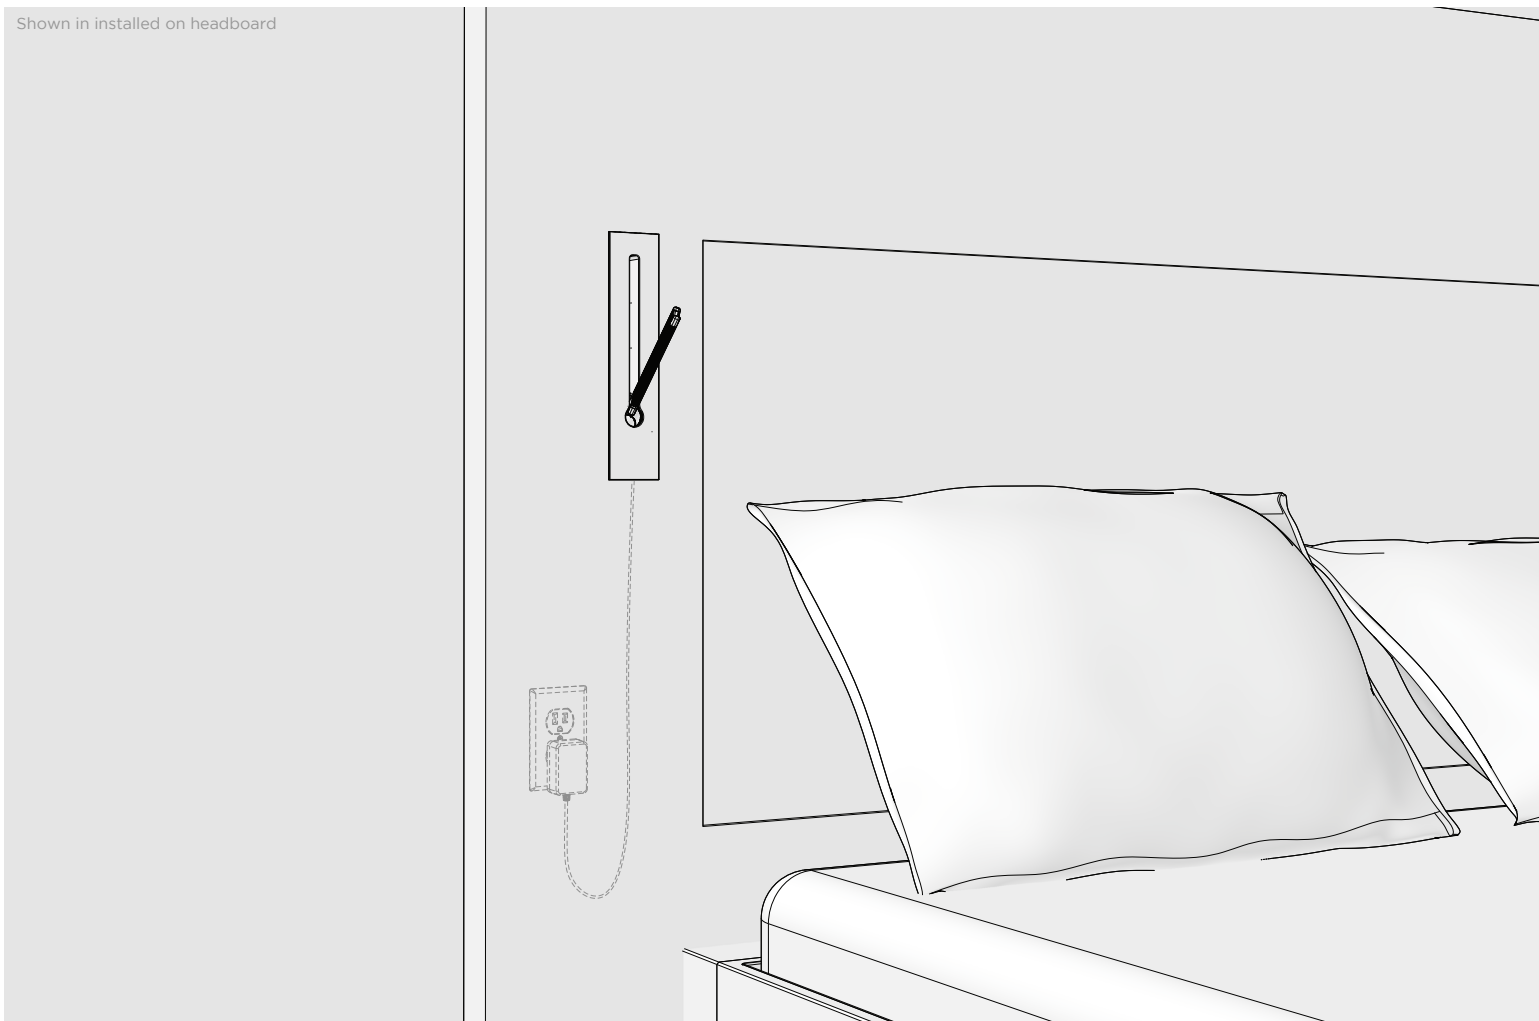



M-RDLT-BLADE HEADBOARD READING LIGHTS

Distributed by



Mormax Company, Inc.
8 Westchester Plaza
Elmsford, NY 10523

914-699-0101
sales@mormax.com
mormax.com

